

FIG. 1

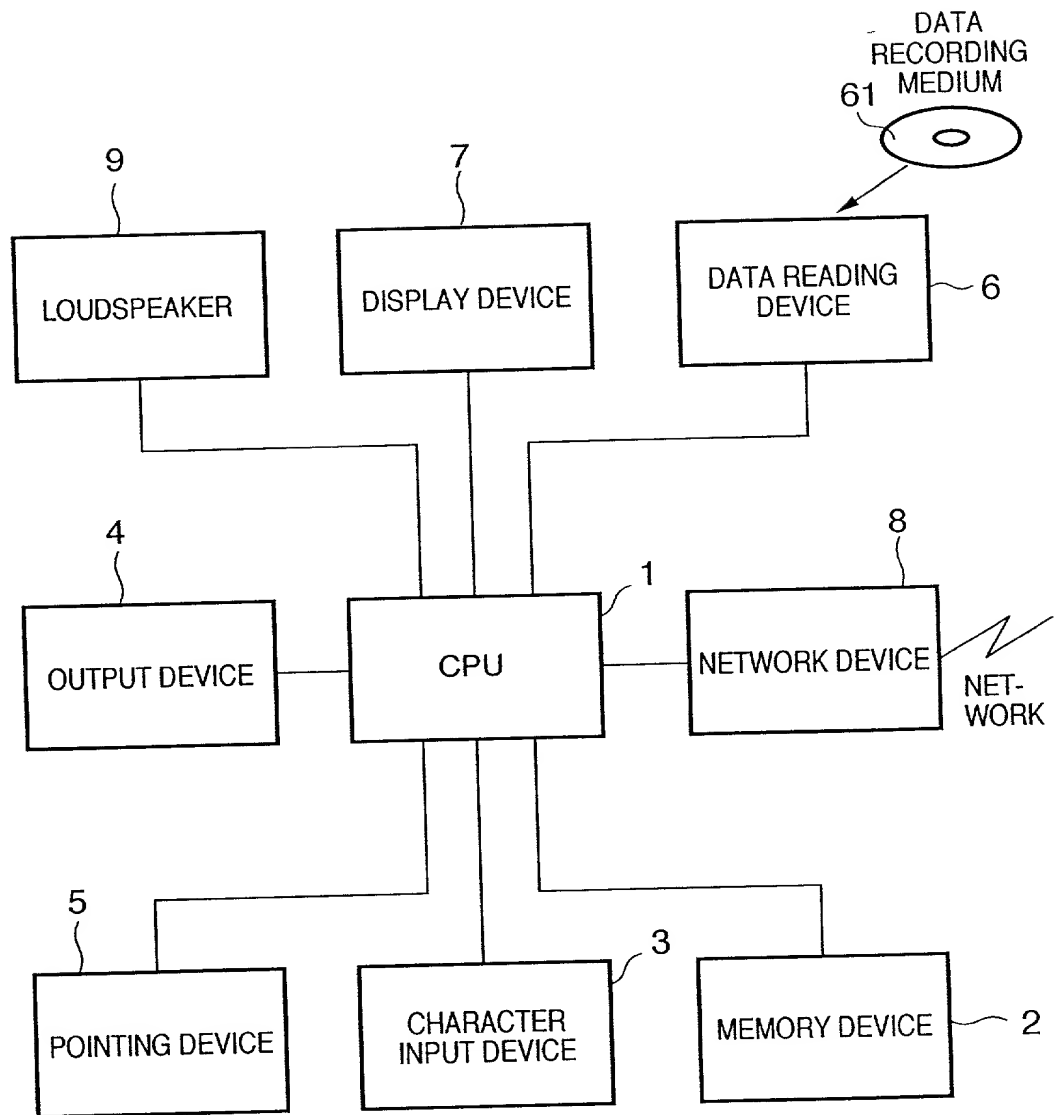


FIG. 2

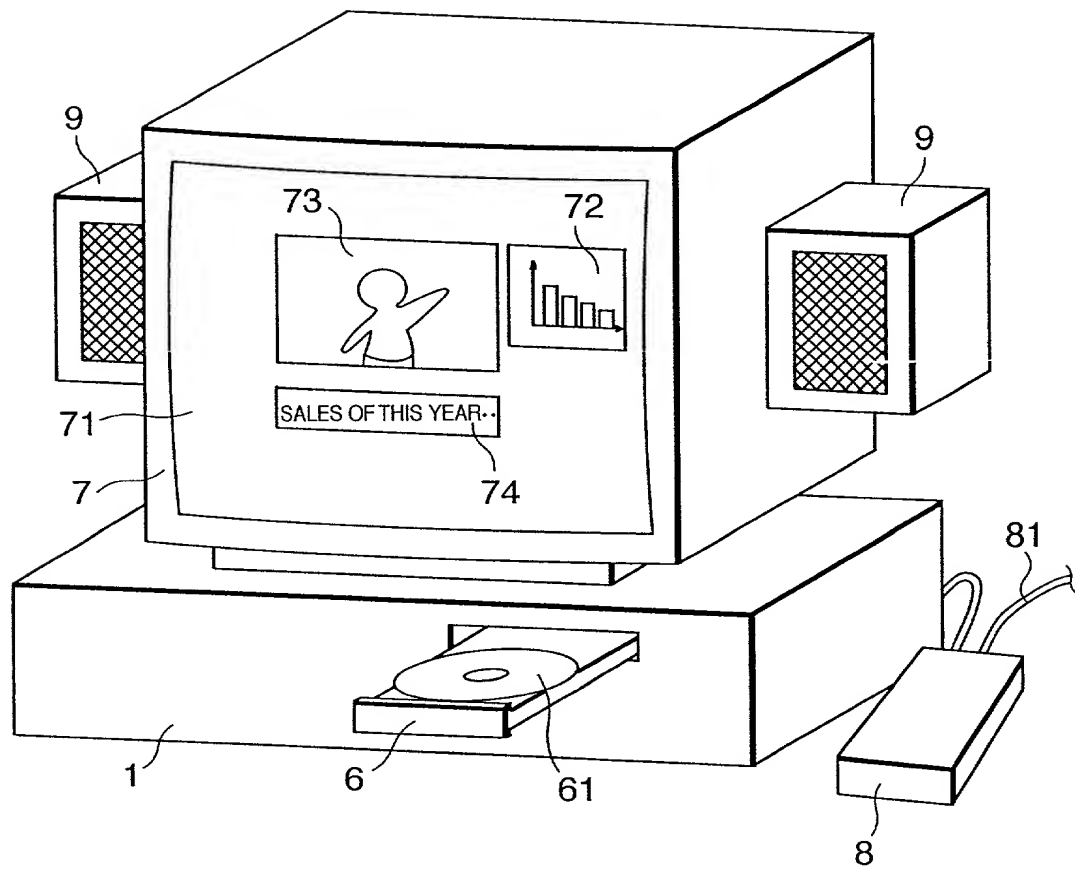


FIG. 3

100

PLAYBACK PRIORITY SETTING DIALOG

	101	102	103	104
105 PRIORITY 1	<input checked="" type="radio"/> MOVING PICTURE	<input type="radio"/> STILL PICTURE	<input type="radio"/> TEXT	<input type="radio"/> SOUND
106 PRIORITY 2	<input type="radio"/> MOVING PICTURE	<input checked="" type="radio"/> STILL PICTURE	<input type="radio"/> TEXT	<input type="radio"/> SOUND
107 PRIORITY 3	<input type="radio"/> MOVING PICTURE	<input type="radio"/> STILL PICTURE	<input type="radio"/> TEXT	<input checked="" type="radio"/> SOUND
108 PRIORITY 4	<input type="radio"/> MOVING PICTURE	<input type="radio"/> STILL PICTURE	<input checked="" type="radio"/> TEXT	<input type="radio"/> SOUND

OK 109

CANCEL 110

FIG. 4

4/6

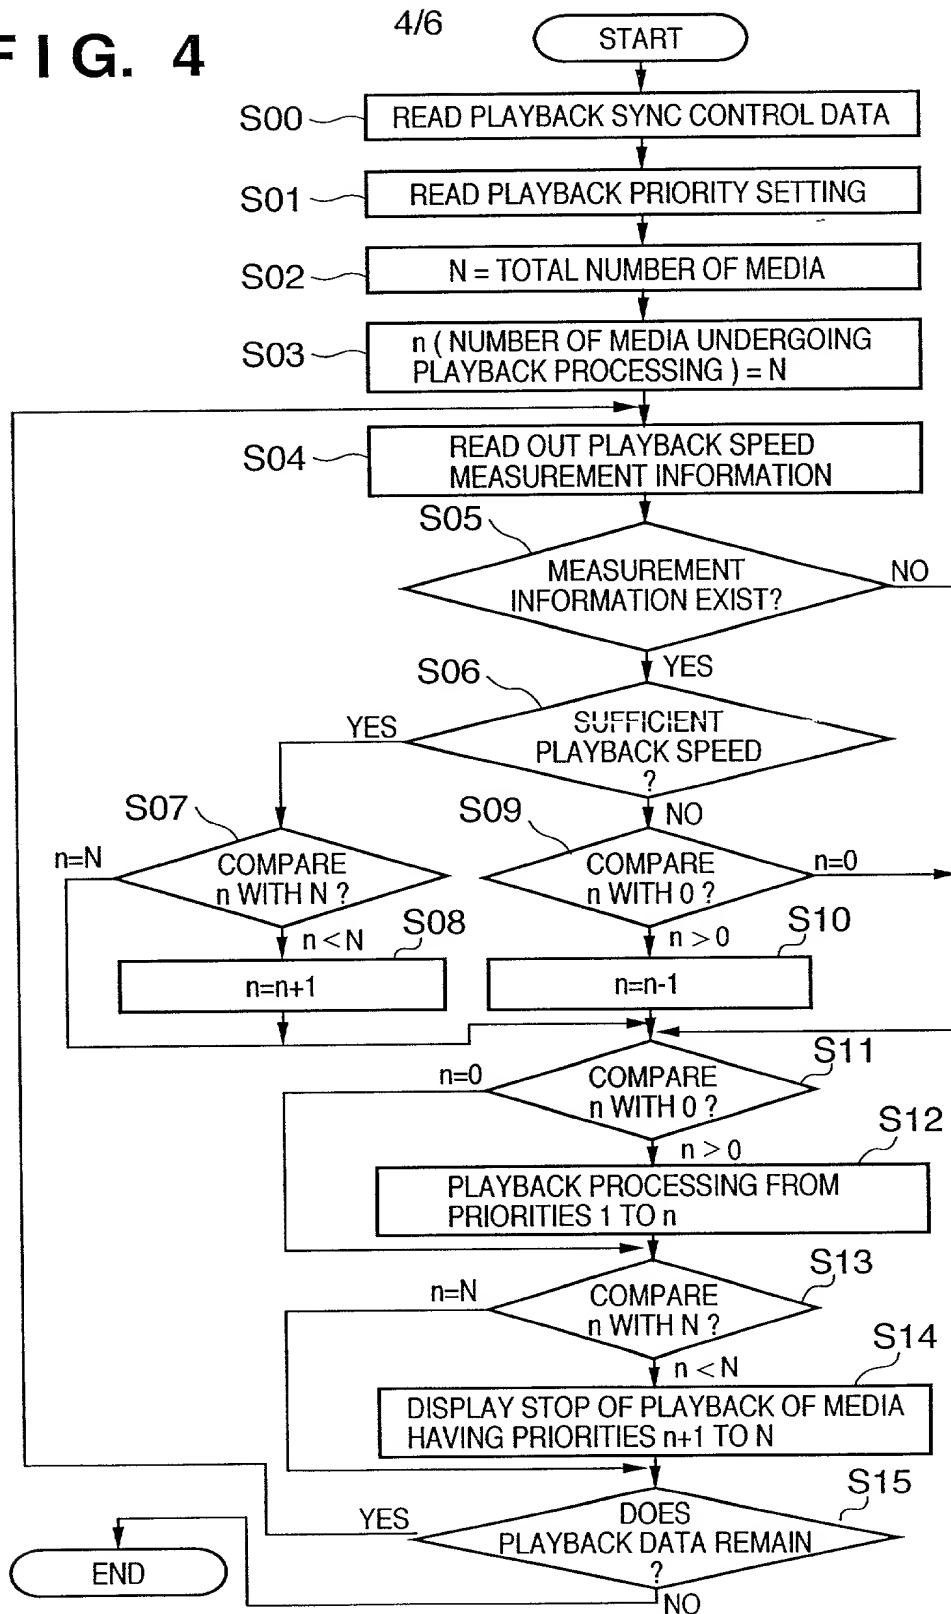


FIG. 5

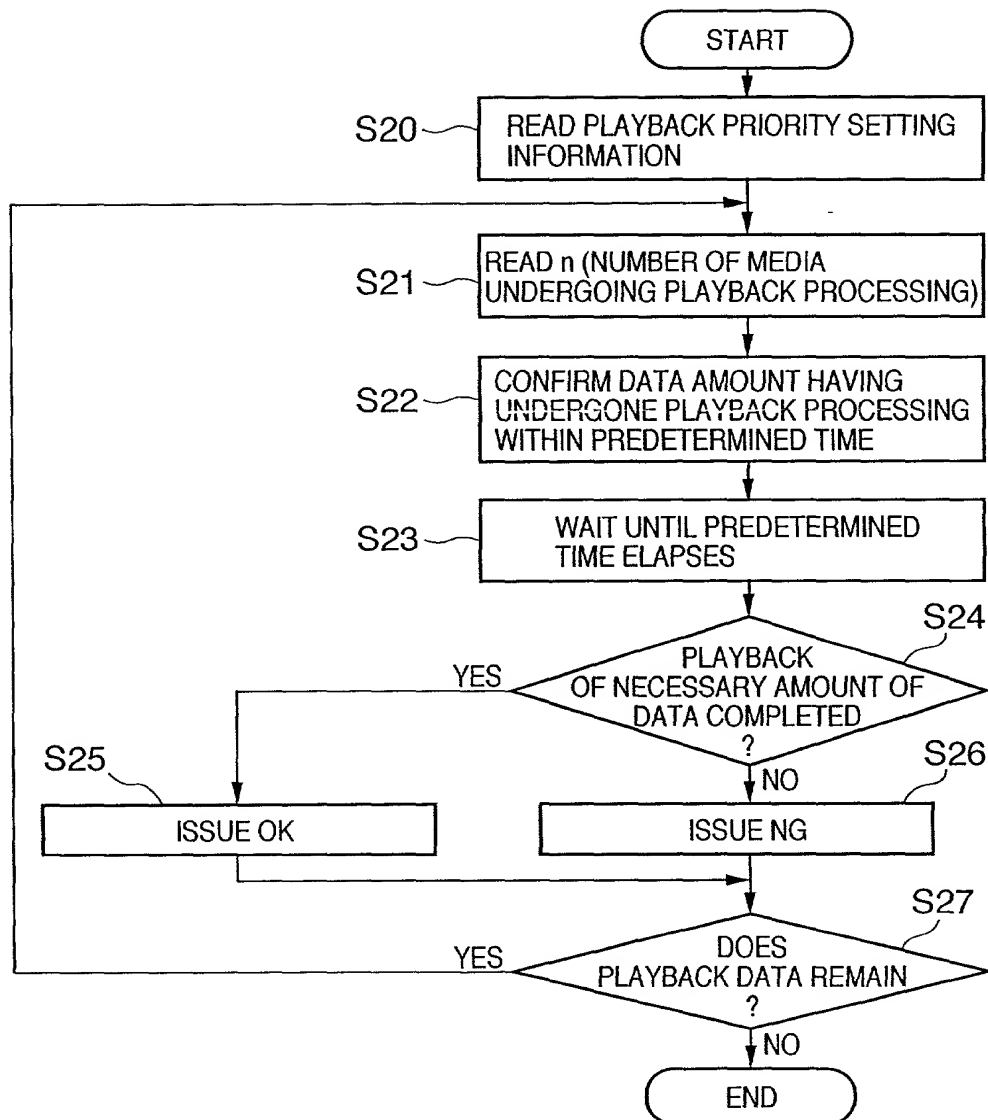


FIG. 6

